



DISPLAY ASSEMBLY

Step By Step Instructions

Easy Assembly - No Tape or Staples Needed.




STEP 1




Place display on flat surface white side facing up. Carefully fold in Flaps A and Tabs I & J along scored crease lines.

STEP 2

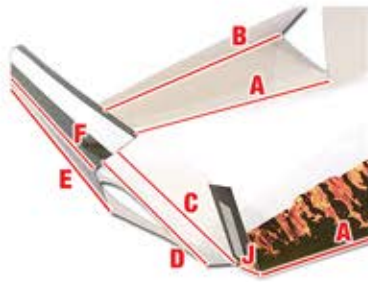

Carefully fold the E and F panels inward along scored creased lines and fold taped J tabs (do not remove tape at this time)

STEP 3

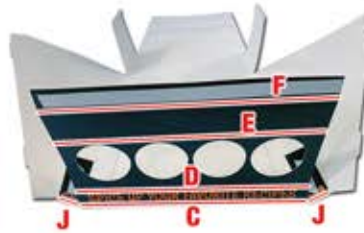

Carefully fold inward along scored crease line C of end with "Die Cut Spice Jar Rack". Fold taped J tabs inward along inner C panel. (do not remove tape at this time)

STEP 4



Carefully fold along scored crease line D of end with "Die Cut Spice Jar Rack" inward towards bottom of display. Fold taped J tabs inward along inner C panel. (do not remove tape at this time)

STEP 5



Fold along scored creased line of H panel and make flush against G Panel. Fold A panels upward into a vertical position and carefully fold B panels along scored creased lines.

STEP 6



Fold G panel back section upward into a vertical position. Make sure to have I tabs folded in against A panels and fold B panels downward (over I tabs) flush against A panels.

STEP 7



Both B panels have two tabs one at the back of panel. (shown above)

STEP 8



B panels second tab at the front of panel. (shown above)





DISPLAY ASSEMBLY

Step By Step Instructions

Easy Assembly - No Tape or Staples Needed.

STEP 9



Make sure that the I tab is between the A and B panels.

STEP 10




Press B panel tabs into pre cut slots in bottom of display as shown above.

STEP 11




Fold J tabs inward towards C Panel.

STEP 12

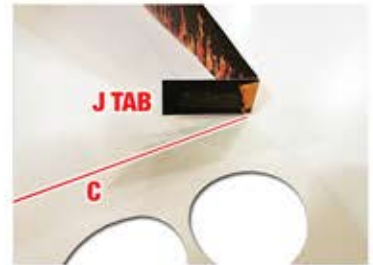

Remove tape from J tabs. Make sure to keep J tabs flush against the bottom of display as you fold scored crease line C panel upward. Press and rub firmly along J tab to secure tape to C Panel.

STEP 13

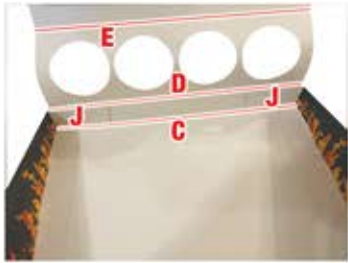


Inside of display showing J tabs secured to C panel.

STEP 14



Remove tape from F panel. Carefully fold along scored crease line of F & E panels. Once the F and E panels are created, Remove tape from F panel and Very Carefully fold panel inward.

STEP 15

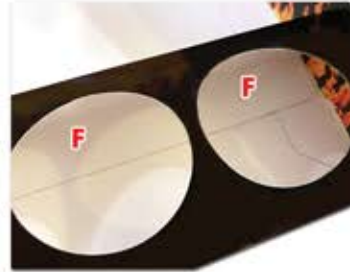

Once "Die Cut Spice Jar Rack" end is in place, press firmly along F panel to secure tape to bottom of display as shown above.

STEP 16



Once Arizona Sweet Heat display box is assembled, you can attach spice bottle rack insert.

STEP 17



Fold all four side panels along scored creased lines. Once creased, remove tape from back panel.

STEP 18



When inserting spice rack, secure panel with tape to back of display box.

STEP 19



Once spice rack panel insert is secured place spice bottles in display box.

STEP 20

